

Serial port control

Connect the RS232 interface with computer or central control device After opening the RS232 serial connection Set according to the following configuration.

Port number: COM1(Set up according to the port number of computer or central control equipment)			
baud rate:	115200	Parity check:	no
Data bit:	8	Stop position:	1

Key control codes are assigned as follows:

VOL-	99 23 18 01 E7 AA	ATV	99 23 07 01 F8 AA
VOL+	99 23 17 01 E8 AA	AV	99 23 08 01 F7 AA
CH+	99 23 19 01 E6 AA	YPBPR	99 23 0A 01 F5 AA
CH-	99 23 1A 01 E5 AA	VGA1	99 23 0B 01 F4 AA
Screen ratio(display scale)	99 23 1E 01 E1 AA	VGA2	99 23 0C 01 F3 AA
INFO	99 23 1C 01 E3 AA	VGA3	99 23 0D 01 F2 AA
UP	99 23 22 01 DD AA	VGA4	99 23 06 01 F9 AA
DOWN	99 23 23 01 DC AA	POWER OFF	99 23 01 01 FE AA
HOME	99 23 00 01 FF AA	POWER ON	99 23 80 01 7F AA
LEFT	99 23 24 01 DB AA	HDMI1	99 23 0E 01 F1 AA
RIGHT	99 23 25 01 DA AA	HDMI2	99 23 0F 01 F0 AA
ENTER	99 23 26 01 D9 AA	HDMI3(Preposition)	99 23 10 01 EF AA
MENU	99 23 12 01 ED AA	Built-in OPS	99 23 11 01 EE AA
SOURCE(signal source)	99 23 13 01 EC AA	USB	99 23 27 01 D8 AA
EXIT	99 23 14 01 EB AA	Auto adjust (Automatic adjustment)	99 23 1F 01 E0 AA
PICTUREMODE	99 23 04 01 FB AA	MUTE	99 23 02 01 FD AA
SOUND MODE	99 23 03 01 FC AA	SLEEP	99 23 1D 01 E2 AA

RS232 interface definition:

