
HoverCam[®]

Mobile Convertible Stand Pillar 695

Product Installation Manual

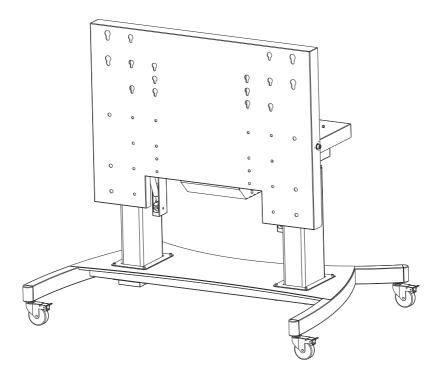


For support please contact: support@thehovercam.com | 866-201-2056 www.thehovercam.com


ASSEMBLY INSTRUCTIONS




2 PERSON ASSEMBLY

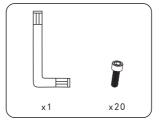


TOOLS AND HARDWARE REQUIRED

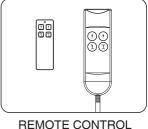


OPERATION

 

BASE PLATE WITH CASTERS

 

MOTORIZED PILLAR ASSEMBLIES

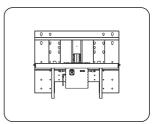


BACK PLATE ASSEMBLY



POWER CABLES


STAND ASSEMBLY


1.Place the base plate on a flat, level surface. Lock the wheels to prevent movement.

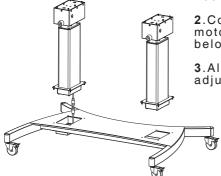


2.Connect power from the base plate to the motorized height adjustable pillars as shown below.

 3.Align and dock the motorized height adjustable pillars and the base plate.




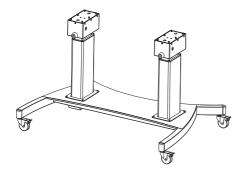

4. Use 8 M5 screws to securely bolt the two assemblies together

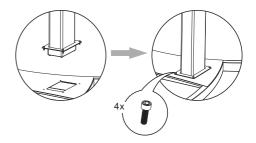


5. Use 12 M5 screws to securely attach the back plate assembly to the height adjustable pillars. Six screws on each side as shown below.

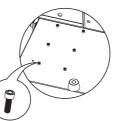


6x




BACK PLATE INSTALLATION

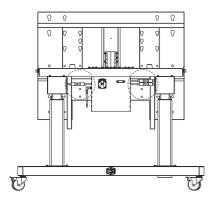

 
6. Connect power to the back plate tilt mechanism by making the connections as shown below




RANGE OF MOTION

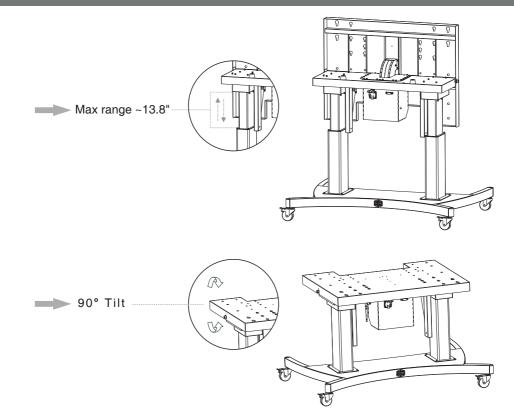

STAND OPERATION

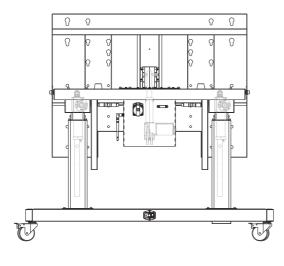


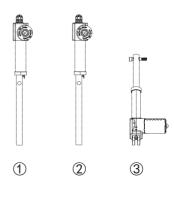 

 













9

- (1) Elevator motor
- (2) Elevator motor
- ③ Tilt motor
- (4) AC Outlet (AC100-240V)
- (5) AC In (AC100-240V)
- (6) Down button
- ⑦ Up button
- ⑧ Tilt up button
- (9) Tilt down button

SUPPORTS LARGE SIZE PANELS

Supports panel sizes from 65" to 86"

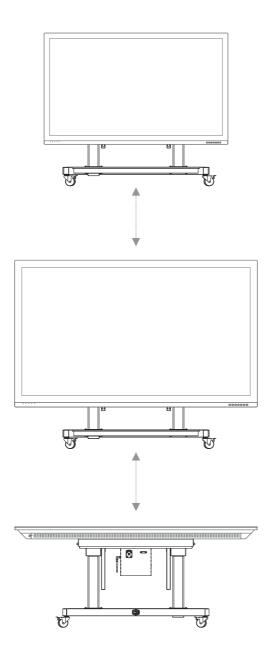

SERVICE & SUPPORT

For service and support, please submit a service ticket at the HoverCam Support center https://thehovercam.desk.com/customer/portal/emails/new

For support please contact: HoverCam.com | 866-201-2056 www.thehovercam.com